
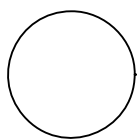


NOTES:

1. SEE PLANS & LEGEND FOR ALL DIMENSIONS AND Bioline LATERAL SPACING
2. RATIO OF Bioline LAT- ERALS TO START CON- NECTIONS IS SHOWN AT 2:1, BUT MAY VARY PER HYDRAULIC DEMAND ON START CONNECTION. (SEE PLANS & LEGEND)

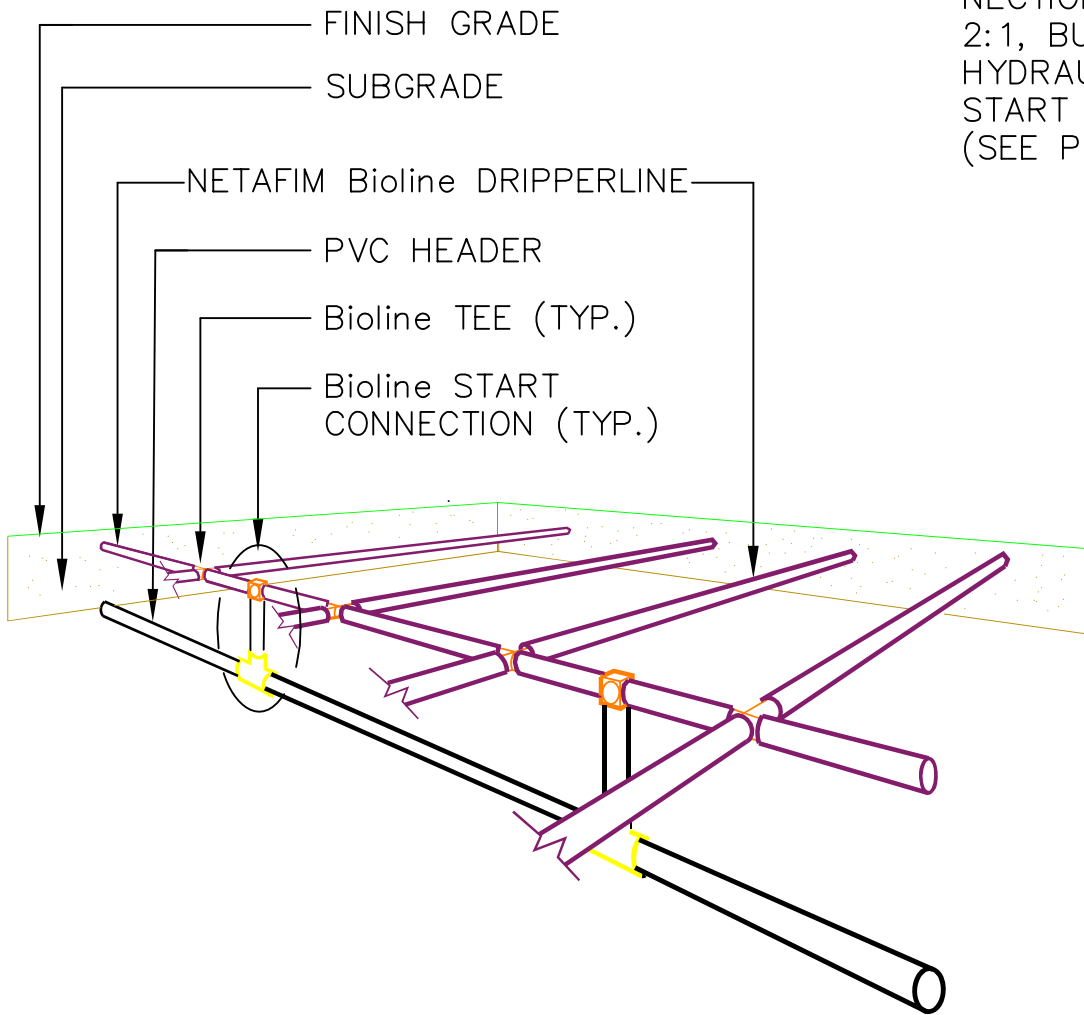

NETAFIM Bioline DRIPPERLINE  
SUB-HEADER INSTALLATION

DETAIL - NO SCALE